

After the device is powered on, plug in the Internet cable, open the solution software, click connect, and then click the PLC Config tab. As shown in the figure, the red box area is the function of modifying ip.

After modifying the IP, click set ip, a dialog box will pop



up, that is, the modification is successful, then close the software, restart the device, and the modified IP will take effect.

